

Service continuity guarantee



Plug and Play



Saves space



Preventive control of leakages



Electrical parameter control

Industry

#### Communications systems







Services

Information systems, UPS systems

### **Technical features**

Earth leakage protection	Туре	Type A (IEC 60755) Ultra-immunised	
	Measurement	True root mean square value (TRMS)	
	Sensitivity	Adjustable, 0.03-0.1-0.3-0.5-1 A*	
	Trip delay	Adjustable, Trip curve: INS, SEL Defined time: 0.1 - 0.2 - 0.3 - 0.4 - 0.5 - 0.6 - 0.8 - 1s	
	Test and reset	Through the use of T and R buttons	
	Sensor element that can be associated	WGC earth leakage transformer (inc.)	
Circuit breaker protection	Built-in element	Motorized circuit breaker	
	Current intensity	In 6-10-16-20-25-32-40-50-63 A	
	Number of poles	2/4	
	Rated voltage, Un Vac	240 / 415	
	Trip curves	C / D	
	Cut off power	6 kA	
Earth leakage reclosing / Circuit breaker	No. of reclosings	Programmable 10 / 2 (by default)	
	Time between reclosings	Configurable, 3 min. (by default)	
	RESET time	According to configured sequence, 30 min. (by default)	
Measurement circuit	Voltage	300 Vac p-n – 520 Vac p-p	
	Frequency	5060 Hz	
	Sensor element that can be associated	MC1 (2 poles) or MC3 (4 poles) (inc.)	
	Transformation ratio of the sensor element	75/0.25 A	
Accuracy Class	V, A, Power	0.50%	
	Active energy	I < 0.1 In (Class 1) I > 0.1 In (Class 0.5)	
	Reactive energy	Class 2	
Communications	Protocol	Modbus/RTU (RS-485)	
	Speed	9600, 19200	
	Bit, parity, stop	8, n, 1	
External inputs	EXT ON/OFF	Trip / Rearm, voltage-free input	
	EXT Locked	External locking of reclosings, voltage-free input	
Electrical	Interlocking output contact	Potential-free, 230 Vac, Imax=100 mA	
features	Positive safety contact	Potential-free, 230 Vac, Imax=100 mA	
	Circuit breaker status contact	Potential-free, 230 Vac, Imax=500 mA	
	Digital outputs	24 Vdc - 50 mA	
Mechanical features	Operating temperature	-10 +55 °C	
	Attachment	DIN rail 46277 (EN 50022)	
	Dimensions	2P: 5.5 modules / 4P: 7.5 modules	
	Weight	2 poles: 539 g / 4 poles: 790 g	
	Protection degree	Terminals IP 20, embedded relay IP 41	
Standards	IEC 60898, IEC 60947-2, IEC 60755, IEC 61557-12		

## CIRCUTOR

CIRCUTOR, SA - Vial Sant Jordi, s/n 08232 Viladecavalls (Barcelona) Spain Tel. (+34) 93 745 29 00 - Fax: (+34) 93 745 29 14 central@circutor.com

# **RECmax CVM**

Circuit breaker and reclosing earth leakage protection, with **measurement included** 





CIRCUTOR, SA reserves the right to change any

information contained in this catalogue.

## **RECmax CVM**

Circuit breaker and reclosing earth leakage protection, with measurement included

# Your installation controlled on a single device



Analyser function.

Measures up to 250

electrical variables.



## Protection

Circuit breaker and ultra-immunised earth leakage protection



#### Self-Reclosing Measurement

Auto-recloses in the event of tripping.Easily disabled if this is not required.





- The Plug&Play system simplifies the installation in an easy and intuitive way.
- Sensors with cable outlet and terminal block. simply connect and start them (included).
- Integrated voltage power supply (selfpowered), simplifying the installation.

## Avoids unwanted tripping

- Protection:circuit breaker and ultraimmunised earth leakage protection.
- Avoids unnecessary tripping due to harmonics.
- Eliminates tripping due to network transients.
- Ensures service continuity until the leakage level exceeds 80%.



### Saves energy

- Measures over 250 electrical variables.
- Through the display or RS485 communications we know how, when and where our energy costs occur.

## **Reduces production losses**

Its automatic reclosing system, both circuit breaker and earth leakage, ensures maximum service continuity.

## Information at your fingertips

- The display enables:
- > Preventive control of leakages
- Settings control
- > Displaying of electrical parameters
- > Displaying of tripping events.

## Remote control and display

The **RECmax CVM** can be monitored remotely (using SCADA) thanks to the RS-485/Modbus communications port that is included.


CONTROLS ALL OF THE INSTALLATION'S PARAMETERS

Power

Studio

compatible

ALL TIMES:

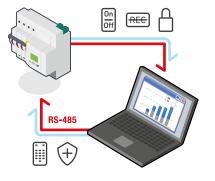

KNOW THE > Status (On/Off) STATUS OF THE **DEVICE AND** CONTROL IT AT

- > Remote control
- > External locking of reclosings
- > End of automatic reclosing
- > Positive safety

C or D curve

#### Wide range of options



-	·	•	Υ
	ŀ	•	
Ľ	•	•••	

2 or 4 poles

From 6 to 63 A

