

New

# Signal Tower & USB



#### The optimal solution unique to the FA field is a USB connection



**Production Line** 

Error notification without a PLC.



#### Interface with equipment

Display the status condition of PC controlled units, such as a printer.



#### Compatible with PATLITE's LU7-USB Model

PATLITE's LU7-USB software is also compatible. No need to make program corrections.

#### Uses a software library

- The use of a software library (downloadable from our website), makes controlling it simple.
- Download a demo application and sample code from our website.

### No need for exclusive driver installations

Installing an exclusive driver is unnecessary because it is supported in the HID device class

### The optimal solution unique to the FA field is a USB connection A variety of attachment options are available. 800mm 300mm SZK-003W/K 100mm SZP-004W/K SZ-010 POLE-100/300/800A21(K)

#### **Specifications** LR6-3USB□-RYG LR6-USB 5V DC (USB bus power) Rated voltage ±5% \*Compliant with USB2.0 standard 500mA (max) -20°C to +50°C 90% RH or less, no condensation Mounting location / direction Indoors / Upright IP65 (IEC 60529), NEMA TYPE 4X,13 \* Except when using pole bracket or wall bracket. Light on, pattern on (4 types) Sound on, sound pattern (4 types) 13 types Typ.80dB (1m from the front of the buzzer aperture / at 2349.3 Hz), Sound reduction (Buzzer switch: Low): approximately -10dB USB2.0 Full Speed Windows®7, Windows®8 (excluding Windows®8 RT) Windows® 8.1 (excluding Windows® 8.1RT), Windows® 10



- LR6-E-RZ/YZ/GZ/BZ - The maximum number of LED unit attachments for LR6-E-□ and LR6-E-□Z, is five in total.
- No units other than the supported LED units are compatible.

\* For details of optional items etc., come visit our website.

- Two or more LED units of the same color for LR6-E-□ and LR6-E-□Z are not connectable.
- No other units are connectable for the LR6-E-MZ.


LR6-E-R/Y/G/B/C

- There are two kind of patterns when lighting the LR6-E-MZ.

## **Outer Dimensional Drawing**


[mm]

LR6-E-MZ

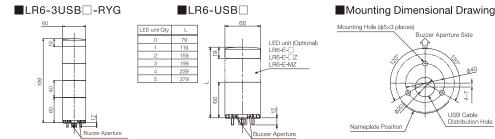

Mounting Hole (φ5×3 place

 ■ Applicable USB Cable Dimensions



#### **PATLITE** Corporation

International Sales Division

TEL.+81-6-7711-8953 FAX.+81-6-7711-8961 E-mail: overseas@patlite.co.jp

#### PATLITE (U.S.A.) Corporation

20130 S. Western Ave. Torrance, CA 90501, U.S.A. TEL.+1-310-328-3222 FAX.+1-310-328-2676 E-mail: sales@patlite.com

#### PATLITE (SINGAPORE) PTE LTD

No.2 Leng Kee Road, #05-01 Thye Hong Centre, Singapore 159086 TEL.+65-6226-1111 FAX.+65-6324-1411 E-mail: sales@patlite.com.sg

#### PATLITE (CHINA) Corporation

Room 1102-1103, No.55, Lane 777, Guangzhong Road (West), ZhabeiDistrict, Shanghai, China 200072 TEL.+86-21-6630-8969 FAX.+86-21-6630-8938 E-mail: sales@patlite.cn

#### PATLITE Europe GmbH

Am Soeldnermoos 8, D-85399 Hallbergmoos, Germany TEL.+49-811-9981-9770-0 FAX.+49-811-9981-9770-90 E-mail: info@patlite.eu

#### PATLITE KOREA CO., LTD.

A-2603, Daesung D-POLIS, 606, Seobusaet-gil, Geumcheon-gu, Seoul, 08504, Korea TEL.+82-2-523-6636 FAX.+82-2-861-9919 E-mail: sales@patlite.co.kr

#### PATLITE TAIWAN CO., LTD.

7F. No. 91, Huayin St, Datong District Taipei, Taiwan R.O.C TEL.+886-2-2555-1611 FAX.+886-2-2555-1621 E-mail: info@patlite.tw

#### PATLITE (THAILAND) CO., LTD.

Olympia Thai Tower, 15th Floor 444 Ratchadapisek Road Samsennok, Huay Kwang Bangkok 10 TEL.+66-2-541-5431 FAX.+66-2-541-5429 E-mail: sales@patlite.co.th

To ensure correct use of these products, read the "Instruction Manual" prior to use. Failure to follow all safeguards can result in fire, electric shock, or other accidents.Specifications are subject to change without notice.

▲ CAUTION



## PATLITE ECO PROJECT

For the benefit of mankind and the earth, Patlite is committed to developing environmentally friendly

0-AH02 EN 1804 A

#### http://www.patlite.com